

# Tachometers

## CT 100 O - CT 100 C



**"Select" key**

See table  
"Functions available from main screen"

**"Function" key**

- 1x : "Hold" : measure holding
- 2x : "Min/Max" : display of minimum and maximum values from **channel 1** since last request.
- 3x : "Min/Max" : display of minimum and maximum values from **channel 2** since last request.
- 4x : Back to held measure.

**"On / off" key**

- ON : Switch-on
- OFF : Switch-off
- Escape : Return to previous screen

**"Backlight" key**

 
- 1x Level 1
- 2x Level 2
- 3x No backlight

## Functions available from main screen

<b>Select probe</b>	1x  →  → Press on  key to scroll down probe types ⇔ Validate with  key
<b>Select unit</b>	2x  →  → Press on  key to scroll down units ⇨ Validate with  key
<b>Automatic shut-off</b>	3x  →  → Press on  key to scroll down minutes ⇨ Validate with  key
<b>Beep</b>	4x  →  → Press on  key to activate or deactivate ⇨ Validate with  key

### ■ **How to change battery**

1. Remove the front part at the back of the device
2. Remove the old battery
3. Insert the new battery in accordance with proper polarity  
drew inside the housing.
4. Replace the front.



 Once returned to KIMO, required waste collection will be assured in the respect of the environment in accordance to 2002/96/CE guidelines relating to WEEE.

**www.kimo.fr**

EXPORT DEPARTMENT  
Boulevard de Beaubourg - Emerainville - BP 48  
77312 MARNE LA VALLEE CEDEX 2  
Tel : + 33.1.60.06.69.25 - Fax : + 33.1.60.06.69.29

